







Component installation

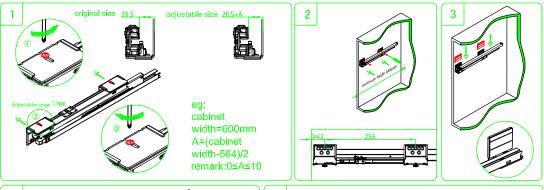

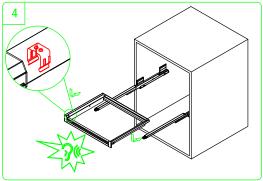


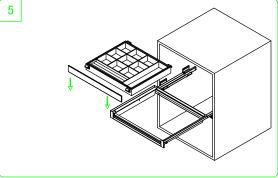

Front panel installation(optional)

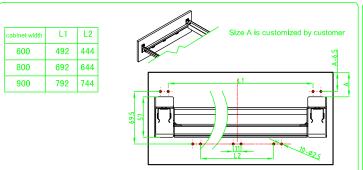

Components disassembly

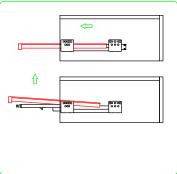

Notes:

- 1. Runner doesn't steadily or pulse? ---Please ensure against wood chips or other scrap fall into runner interior during installation.
- 2.Runner doesn't work smoothly? ---Please check bottom and back panel measurement is up to the mustard or not; bottom pannel and cabinet is regularity or not; and runners are vertical and horizontal or not.
- 3.Runner can not clip on? ---Please ensue the runner is on the correct hole position.
- 4.Frame can not close well? ---Please ensue the runner is on the correct hole position, and ensure the clamp well fix on.